

# MPG 03 NC / NO

## Montagehinweise Endschalter



Bild 1.

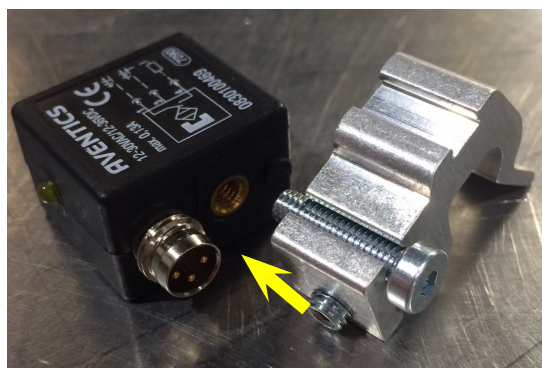


Bild 2.

### Stellung NC / NO

Die REED Endschalter und das MPG 03 NC Ventil. (siehe Bild 1.).  
 Klemmhalter und Endschalter zusammenbauen (siehe Bild 2.).  
 Baugruppe an der Profilschiene befestigen (siehe Bild 3.).  
 NC Baugruppe mit 43mm Abstand montieren (siehe Bild 4.).  
 NO Baugruppe mit 21mm Abstand montieren (siehe Bild 5.).



Bild 3.

### Endschalter

Endschalter (NC oder NO)	2-Leiter	3-Leiter
Baugruppe ohne Kabel:	10300	10303
Baugruppe mit 5m Kabel:	10298	10301
Baugruppe mit 10m Kabel:	10299	10302

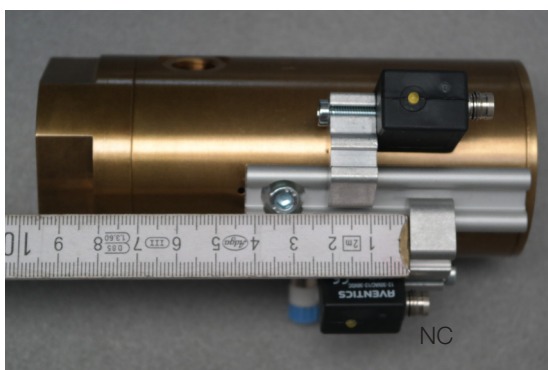


Bild 4.

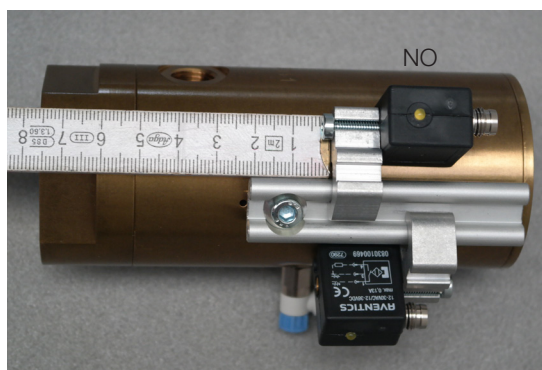


Bild 5.



m-tech GmbH  
 Teslastraße 6  
 74670 Forchtenberg / Deutschland

# MPG 03 NC / NO

## Installation guide limit switch



Image 1.

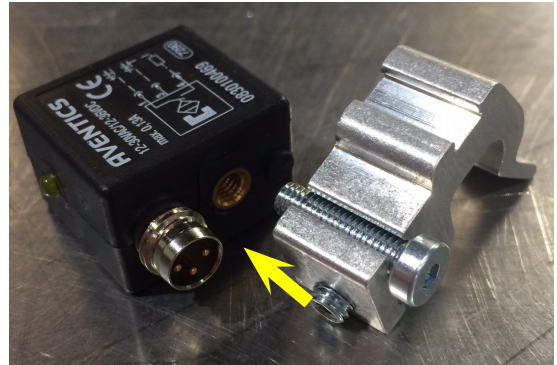


Image 2.

### Position NC / NO

The REED limit switches and the MPG 03 NC valve. (see image 1.).  
 Assemble the bracket and limit switch (see image 2.).  
 Attach Assembly on the profile rail (see image 3.).  
 Adjust NC Assembly at 43mm (see image 4.).  
 Adjust NO Assembly at 21mm (see image 5.).

### Limit switch

Limit switch (NC or NO)	2-wire	3-wire
Assembly without cable:	10300	10303
Assembly with 5m cable:	10298	10301
Assembly with 10m cable:	10299	10302



Image 3.

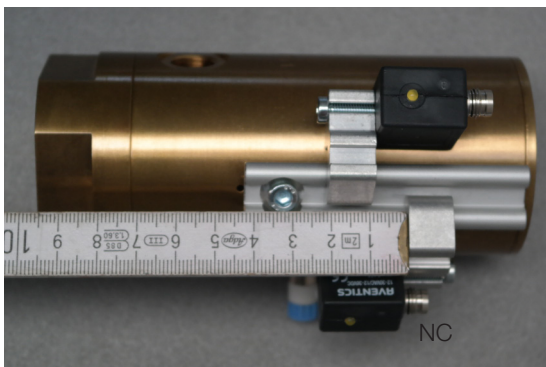


Image 4.

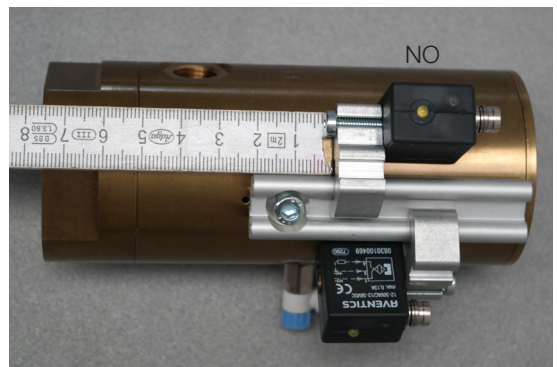


Image 5.



m-tech GmbH  
 Teslastraße 6  
 74670 Forchtenberg / Germany

Version October 2017