

# MPG 12 NC / NO

## Montagehinweise Endschalter



Bild 1.

### Stellung NO

Die Zylinderschraube M8 x 120 lockern. (siehe Bild 2./3.) Die 42 mm Distanzhülse für Stellungsrückmelder NO über die Schraube schieben (siehe Bild 3.) und die Schraube mit 16 Nm anziehen. (siehe Bild 4.) Klemmhalter und Endschalter zusammenbauen (siehe Bild 6.) und um die Schraube legen. (siehe Bild 5.) Distanzhülse dient als Höhenanschlag. (siehe Bild 7.) Zum Schluss die Klemmschraube handfest anziehen. (siehe Bild 7.)

### Stellung NC

Endschalter für Stellung NC befindet sich gegenüber des pneumatischen Luftanschlusses.

Die Zylinderschraube M8 x 120 lockern. (siehe Bild 2./3.) Die 30mm Distanzhülse für Stellungsrückmelder NC über die Schraube schieben. (siehe Bild 3.) Anschließend die Schraube mit 18 Nm anziehen. (siehe Bild 4.) Klemmhalter und Endschalter zusammenbauen (siehe Bild 6.) und um die Schraube legen. (siehe Bild 5.) Distanzhülse dient als Höhenanschlag. (siehe Bild 7.) Zum Schluss die Klemmschraube handfest anziehen. (siehe Bild 7.)

### Endschalter

Endschalter (NC oder NO)	2-Leiter	3-Leiter
Baugruppe ohne Kabel:	10300	10303
Baugruppe mit 5m Kabel:	10298	10301
Baugruppe mit 10m Kabel:	10299	10302



m-tech GmbH  
 Teslastraße 6  
 74670 Forchtenberg / Deutschland



Bild 2.

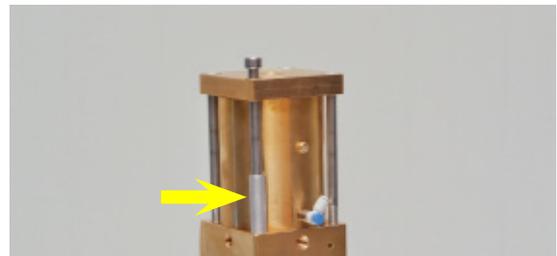


Bild 3.

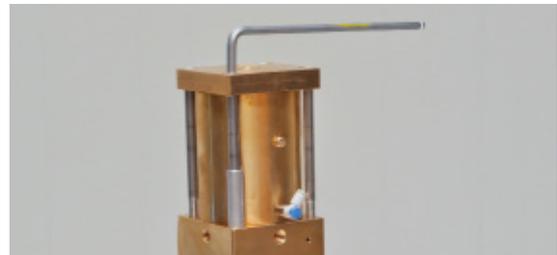


Bild 4.



Bild 5.



Bild 6.

Bild 7.

# MPG 12 NC / NO

## Installation guide limit switch



Image 1.

### Position NO

Loosen the cylinder screw M8x120. (see image 2./3.) Slide the 42mm spacer for position feedback NO over the screw. (see image 3.) Then tighten the screw with 16 Nm. (see image 4.) Assemble the bracket and limit switch (see image 6.) and insert the screw (see image 5.) Spacer sleeve serves as a height stop. (see image 7.) Tighten the clamp screw by hand. (see image 7.)

### Position NC

The limit switch for NC position is at the opposite side of the pneumatic air connection.

Loosen the cylinder screw M8x120. (see image 2./3.) Slide the 30mm spacer for position feedback NC over the screw. (see image 3.) Then tighten the screw with 18 Nm. (see image 4.) Assemble the bracket and limit switch (see image 6.) and insert the screw. (see image 5.) Spacer sleeve serves as a height stop. (see image 7.) Tighten the clamp screw by hand. (see image 7.)

### Limit switch

Limit switch (NC or NO)	2-wire	3-wire
Assembly without cable:	10300	10303
Assembly with 5m cable:	10298	10301
Assembly with 10m cable:	10299	10302



Image 2.



Image 3.

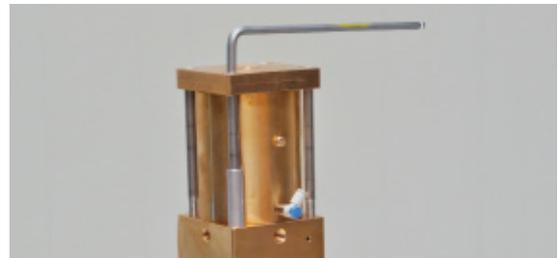


Image 4.



Image 5.



Image 6.

Image 7.



m-tech GmbH  
 Teslastraße 6  
 74670 Forchtenberg / Germany